



R-Flow™ Active AirCondition® Jacket

Gents size chart

| Size | S/M [46/48] | L [50] | XL [52] | XXL [54] | XXXL [56] |
|--------|----------------|-----------|------------|-------------|--------------|
| Chest | 92-96 | 100 | 104 | 108 | 112 |
| Waist | 78-82 | 86 | 90 | 94 | 98 |
| Hip | 96-100 | 104 | 108 | 112 | 116 |
| Sleeve | 61-62 | 63 | 64 | 65 | 66 |

All measurements in cm.

A (Chest)

Measure directly under the arms at the fullest point.

B (Waist)

Measure around your natural waistline.

C (Hip)

Measure around the hips at the fullest point.

D (Sleeve)

Measure from shoulder point down to your waist.

