

R-Flow™ Active AirCondition® Jacket

Ladies size chart

Size	XS [36]	S [38]	M [40]	L [42]	XL/XXL [44/46]
Chest	84	88	92	96	100-104
Waist	68	72	76	80	84-88
Hip	94	97	100	103	106-109
Sleeve	59,6	59,9	60,2	60,5	60,8-61,1

All measurements in cm.

A (Chest)

Measure directly under the arms at the fullest point.

B (Waist)

Measure around your natural waistline.

C (Hip)

Measure around the hips at the fullest point.

D (Sleeve)

Measure from shoulder point down to your waist.

